


**Pairing the remote control with the gimbal:**  
Please press the function button of the gimbal 7 times once the gimbal is turned on, the bluetooth light will flash alternately in yellow and green and enter the pairing mode.



Make sure the gimbal is on the pairing mode before turning on the remote control to connect.

**During the pairing process:**  
a. The pairing can be completed in 3 seconds, after the gimbal bluetooth light stop flashing alternately in yellow and green;  
b. If the remote control is not paired within 30 seconds, the pairing will be cancelled;  
c. Click the function button to cancel pairing;  
d. Double-click the function button to clear the paired remote control and cancel pairing;  
(And the paired remote control will be unavailable and need to be repaired)

① **Power Button**  
ON: Power On  
OFF: Power Off

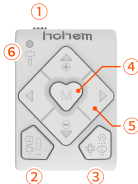

② **Shutter Button**  
(Make sure the app connect to the gimbal successful)  
Single Press: Take photo, Start/End video  
Double Press: Switch the photo and video modes  
Triple Press: Switch the front and rear cameras  
(Only available in the app)

③ **Function Button**  
Single Press: Switch the landscape and portrait modes  
Double Press: Recenter the gimbal  
Triple Press: Inception (Auto rotation)

④ **M Button (Gimbal Working Mode)**  
Single Press: Pan&Tilt Follow  
Double Press: Pan Follow  
Triple Press: All Lock  
Quartic Press: POV (All Follow)  
Long Press: Switch the zoom in/out mode and gimbal tilt control mode  
(Zoom in/out mode only available in the app)

⑤ **Navigation Buttons:**  
Up/Down/Left/Right  
Up/Down: Tilt Control (Indicator light shows green)  
Control the image zoom in/out  
(Indicator light shows blue and only available in the app)  
Left/Right: Pan Control

⑥ **Indicator Light**  
The indicator light shows green or blue in button operation. If no light shows, it means the remote control is not turned on or no battery.  
Green light: Gimbal controlling  
Blue light: Phone camera controlling