

MOJOGEAR

SMARTPHONE & TABLET MOUNT

WITH COLD SHOE MOUNT

SKU: MG-31



HOW TO SWITCH BETWEEN SMARTPHONE AND TABLET MODE?

Press the knob on top of the clamp. At the same time, pull to enlarge the clamp and use it in tablet mode.

Press the knob again to lock the clamp in smartphone mode.

HOW TO MOUNT AN ACCESSORY?

You can use the cold shoe mount on top to mount a microphone, LED light or other accessory with cold shoe.

MOJOGEAR

MOJOGEAR develops high-quality products for smartphone filmmakers, mobile creators and everyone else who wants to get the most out of their phone or camera. MOJOGEAR is proudly based in The Netherlands.

All MOJOGEAR products are covered by a 2-year warranty.

If you have any questions or feedback, please let us know at support@mojogear.eu. We'd love to hear from you!



MOJOGEAR

SMARTPHONE & TABLETHOUDER

MET COLD SHOE-MOUNT

SKU: MG-31



HOE WISSEL JE TUSSEN SMARTPHONE- EN TABLET-MODUS?

Druk op de knop aan de bovenkant van de houder. Trek tegelijk omhoog om de houder in tablet-stand te gebruiken.

Druk nogmaals op de knop om de houder te vergrendelen in smartphone-stand.

HOE BEVESTIG JE EEN ACCESSOIRE?

In de cold shoe-mount op de bovenkant kun je een microfoon, lampje of ander accessoire met cold shoe bevestigen.

MOJOGEAR

MOJOGEAR ontwikkelt kwalitatieve producten voor smartphone-filmmakers. mobile creators en iedereen die het meeste uit zijn of haar smartphone of camera wil halen. MOJOGEAR is een Nederlands bedrijf.

Op alle MOJOGEAR-producten zit twee jaar garantie.

Heb je vragen of feedback, mail ons dan op support@mojogear.eu. We horen graag van je!

