 


MOJOGEAR

CHARGE+

**140W
GaN CHARGER**

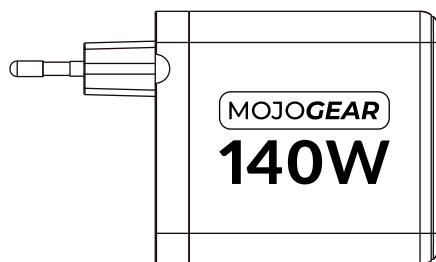

front

USER MANUAL

Thank you for choosing this MOJOGEAR charger. In this user manual you'll find all the relevant information to use your charger.

For information in other languages, please visit:

 


www.mojogear.eu/manuals

Contents

1. How to use
2. Box contents
3. Technical details
4. Safety instructions
5. About MOJOGEAR

1. How to use

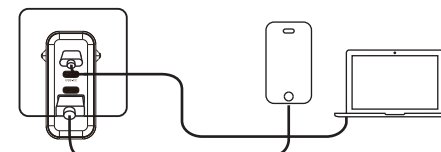

1. Connect one or more charging cables.
2. Connect the charger to a wall socket.
3. Connect the other end of the charging cable to your laptop, smartphone or other device.

To charge your laptop, please use port **USB-C1 OR USB-C2**. These ports always support the highest output.

2. Box contents

- Charger
- Manual

3. Technical details


Name:	MOJOGEAR Charge+ 140W PD GaN Fast Charger MG-C02 PD-577
Input (EU Plug):	100-240V~50/60Hz 2.1A
USB-C1/C2 Output:	3.3V-21V=5A (PPS) / 5V=3A / 9V=3A / 12V=3A / 15V=3A / 20V=5A / 28V=5A (140W Max)
USB-C3 Output:	5V=3A / 9V=2.22A / 12V=1.67A (20W Max)
USB-A Output:	5V=3A / 9V=2A / 12V=1.5A (18W Max)
Combined Outputs:	
C1+C2	65W+65W
C1+C3 or C2+C3:	100W+20W
C1+A or C2+A:	100W+18W
C3+A:	5W=3A
C1+C2+C3:	65W+45W+20W
C1+C2+A:	65W+45W+18W
C1+C3+A or C2+C3+A:	100W+5W=3A (C3+A)
C1+C2+C3+A:	65W+45W+5W=3A (C3+A)
Total Output:	140W Max

back



4. Safety instructions

 - Don't drop, disassemble or mechanically abuse the charger.
- Don't attempt to repair the charger by yourself.
- Avoid exposure to water or high humidity.
- Don't expose to excessive heat.
- Don't use near flammable gases.
- Keep out of reach of children.

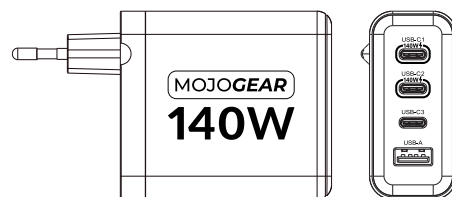

5. About MOJOGEAR

MOJOGEAR

MOJOGEAR develops high-quality products for smartphone filmmakers, mobile creators and everyone else who wants to get the most out of their phone or camera. MOJOGEAR is proudly based in The Netherlands.

All MOJOGEAR products are covered by a 2-year warranty.

If you have any questions or feedback, please let us know at support@mojogear.eu. We'd love to hear from you!